Product Information VNV-2, ZNV-2



CONTROLS

External level devices for conductive point level switch

Application/Specified usage

- \cdot Point level detection of aqueous, conductive media in tanks with a min. conductivity of 1 $\mu S/cm$
- · Simple level control for tanks

Application examples

- · Empty/full indication in tanks and pipes
- · Level control in tanks
- · Overfill protection in tanks
- · Dry running protection in pipes (e.g. before pumps)

Special features

- · Measurement signal is absolutely free of DC voltage
- · Devices for up to 2 or up to 4 point levels
- · Devices for up to 2 level controls and up to 2 point levels
- $\cdot\,$ All devices feature an active output or change-over contact
- · Devices with optional wire break monitoring

Application examples

Level control in vessel with additional overfill protection


Medium flows into the vessel through the inlet. When the maximum level Ā is reached, the pump is started and stops as soon as the medium level drops below the minimum level <u>A</u>. The overfill sensor B prevents overflowing of the tank in the event of a malfunction.


Simple level control in vessel

Medium is continuously removed from the vessel at the outlet. When the medium level drops below the minimum level \underline{A} , medium is added at the inlet until the maximum level \overline{A} is reached. An after-run period can be set using the time setting.

ZNV-2, VNV-2



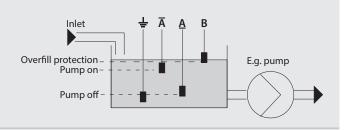



Technical data for devices with supply voltage 24 V DC

	With Supply Voltage 24 V DC	
Design	DIN standard housing Dimensions VNV-2 Dimensions ZNV-2	Made of ABS for rail mounting as per EN50022 45 x 75 x 105 mm (W x H x D) 22.5 x 75 x 105 mm (W x H x D)
Protection class		IP 20; terminals protected against contact
Environment	Operating temperature Humidity	-10+55 °C 065 % no condensation
Electrical connection		Screw terminals 2.5 mm², pluggable
Sensor measurement		Free of DC voltage
Sensitivity	Adjustable	0.11000 k Ω (devices without wire break monitoring) 0.1100 k Ω (devices with wire break monitoring)
Time delay (on/off)	1CT(W), 2CT(W) Sensors without time trimmer	0.510 s, adjustable per trimmer Fixed time delay selectable in order code
Supply voltage		24 V DC (±15 %) 75 mA device + max. 100 mA per active output in use
Output	PNP Change-over contact	24 V DC, max 100 mA (supply voltage -10 %) 250 V AC/3 A or 30 V DC/3A
Noise immunity	Electromagnetic compatibility	2014/30/EU
Line capacity	From device to sensor	Мах. 2000 рF
Weight	VNV-2 ZNV-2	Approx. 150 g Approx. 100 g

Technical data for devices with supply voltage 115 V AC, 230 V AC						
Design	DIN standard housing Dimensions	Made of ABS for rail mounting as per EN50022 45 x 75 x 105 mm (W x H x D)				
Protection class		IP 20; terminals protected against contact				
Environment	Operating temperature Humidity	-10+55 °C 065 % no condensation				
Electrical connection		Screw terminals 2.5 mm², pluggable				
Sensor measurement		Free of DC voltage				
Sensitivity	Adjustable	0.11000 k Ω (devices without wire break monitoring) 0.1100 k Ω (devices with wire break monitoring)				
Time delay (on/off)	1CT(W), 2CT(W) Sensors without time trimmer	0.510 s, adjustable per trimmer Fixed time delay selectable in order code				
Supply voltage		115 V AC/230 V AC (±10 %), 50-60 Hz, max. 3 W				
Output	Change-over contact	250 V AC/3 A or 30 V DC/3A				
Noise immunity	Electromagnetic compatibility	2014/30/EU				
Low Voltage Directive		2014/35/EU				
Line capacity	From device to sensor	Мах. 2000 рF				
Weight	VNV-2 (relay output)	Approx. 200 g				

Legend



Advice:

Danger:

Non observance of this warning notice may cause troubles.



Non observance of this warning notice may cause serious injury of persons and / or damages or destruct the unit.



Information:

This symbol indicates useful additional informations.

Note on CE



- Electromagnetic Compatibility Directive 2014/30/EU Low Voltage Directive 2014/35/EU
- · Compliance with the applicable EU directives is identified by the CE label on the product.
- The operating company is responsible for complying with the guidelines applicable to the entire installation.

Assembly instructions

The digital display is designed for integration in switch cabinets and housings.

- 1: The device is only suitable for installation in permanent and weather-protected switch cabinets and housings with a maximum operating altitude of 2000 m.
- During installation, all lines and connections must be de-energized.
- 2: The building equipment must feature a disconnecting device such as a switch or circuit breaker in an accessible location and that is labeled as a disconnect for this device. This disconnecting device must be able to disconnect all cables conducting line power.
- 3: In devices with 115 V AC and 230 V AC supply voltage, the transformer must be protected with a nominal fuse rating of 1 A (slow) on the primary side. A fuse must be provided by the operator for each device.
- 4: The relay outputs are protected with a normal fuse rating of 3.15 A (slow). The fuse must be provided by the operator for each relay.
- 5: The devices are suitable for a pollution degree of 2.
- 6: The rated voltage is 250 V AC and the insulation voltage is 3000 V AC CAT II.

Transport/Storage



- · Use suitable transport packaging only to avoid damage of the equipment!
- · No outdoor storage
- Store dry and dust free
- · Not exposed to corrosive media
- Protected against solar radiation
- Avoiding mechanical shock and vibration
- Storage temperature -40...+70 °C
- · Relative humidity maximum 95 % no condensation

Cleaning



The device may only be cleaned with a dry cloth.





Global safety instructions

follow them carefully.

(See assembly instructions)

gases are present.

Mounting, electrical connection, set up and mainte-

nance of the unit must be done by trained and skilled

personnel. They must have read and understood these installation and operating instructions. They must

· Do not use the product where flammable or combustion

Only use the product properly built-in condition.

inside. Inside are high voltage circuits.

This product is not a safety device (SIL). Malfunction

of the device may lead to failures of the outputs. Take

safety measures, such as installing a separate monitoring system, to ensure safety and to prevent serious accidents caused by such failures, thus ensuring safety. Do not open the housing, there are no serviceable parts

ot

Installation



- If multiple devices are installed next to each other (series), they must be separated by at least 5 mm.
- Ensure that the terminals are secure before switching the device on. This is especially important for the connecting terminals of devices with a relay output.
- Only one VNV-2/ZNV-2 device may be connected to a tank. Multiple devices in one tank may lead to detection faults.

Setting the level detection

- 1: Connect the device according to the drawings.
- 2: Set the trimmer of the associated sensor to the middle setting (0).
- 3: Wet the sensor with the medium with the lowest conductivity.
- 4: Turn the trimmer to the full indicator setting (left half) or to the empty indicator setting (right half) until the output or the relay switches and the status LED for the output lights up.
- 5: The sensitivity setting is now complete.
- 6: If there is a trimmer for the time delay (hour glass), an additional on (left half) or off (right half) delay of up to 10 seconds can be set. There is no additional delay in the middle position.
- 7: If there is no time delay trimmer for a sensor, a fixed time delay applies to the on and off delay that is specified in the order code.

Note

To simulate the sensors, a wire bridge can be connected between the corresponding terminals. This does not damage the evaluation electronics (short-circuit-proof).

Control of the wire break monitoring (only in devices with the option "W")



- 1: The connection to the sensor is interrupted in a device with wire break detection.
- 2: All LEDs flash to indicate the break and the "Error" output indicates the error. The output becomes inactive or the relay is switched off.
- 3: All further outputs are set to inactive or the relays are switched off.

Setting the level detection switching function

The full or empty indicator function is set by positioning the sensitivity trimmer in the left or right half of the rotation range.

Full indicator switching function

Sensor is wet	Output is active or the relay is switched (LED is illuminated)			
Empty indicator switching function				
Sensor is wet	Output is inactive or the relay is no			

switched (LED is off)

Functional principle of the level control

Full indicator switching function

Tattinareator switching function						
Both sensors	Active output (relay is switched)					
Immersed	LED is illuminated					
Upper sensor Not immersed Lower sensor Immersed	Previous state is maintained					
Both sensors	Inactive output (relay is not switched)					
Not immersed	LED is not illuminated					
Switching function of empty indicator						
Both sensors	Active output (relay is switched)					
Not immersed	LED is illuminated					
Upper sensor Not immersed Lower sensor Immersed	Previous state is maintained					
Both sensors	Inactive output (relay is not switched)					
Immersed	LED is not illuminated					

Information



For all devices with level control, the upper sensor can be connected alone instead of the control function. In this case, the upper sensor is used solely for level detection.

CONTROI	LS
---------	----

Wiring diagram k	еу	Wiring diagram key		
Label	Explanation/translation	Out A, B, C, D	Active output (PNP)	
÷	Ground	ERROR	Signaling for wire break	
Ā	Top sensor	LED In A, B, C, D	For level detection: LED indicator of	
Δ	Bottom sensor		sensor. For level control: LED indica- tor of top sensor	
A, B, C, D	Sensor	LED Relay A, B	LED indicator for relay	
Power L1 / +	L1 (AC devices) or + supply voltage (DC devices)		Full indicator setting	
	N (AC devices) or	u	Empty indicator setting	
Power N / -	- supply voltage (DC devices)	- \$ -	Sensitivity trimmer	
Relay A, B	Potential-free change-over contact as	L	On delay	
, .	output	l.	Off delay	
		×	Time delay trimmer	

Application examples for devices with active output VNV-2, supply voltage: 24 V DC							
Model	Function	Application					
4A / 1CT2D(W) / t	 1 x level/time (A) 2 x detection (B, C) t: Time delay in [ms], selectable Option W: Wire break 	 1 x level control with adjustable time delay for A Time delay for B and C selectable in order code Sensor B for overflow protection and sensor C for dry running protection Optional with wire break monitoring 	+ A AB C ↓ A AB C				
4A / 2CT(W) / 0050	 2 x level/time (A, B) Min. time delay 50 ms Option W: Wire break 	 2 x level control switch adjustable time delay for A and B Optional with wire break monitoring 					
4A/4D/t	 4 x detection (A, B, C, D) t: Time delay in [ms], selectable 	 4 x level detection Selectable time delay for A, B, C and D in order code 	+ ABCD				

CONTROLS

6

Application examples for devices with relay output VNV-2, supply voltage: 24 V DC, 115 V AC or 230 V AC								
Model	Function	Application						
2R / 1CT(W) / 0050	 1 x level/time (A) Min. time delay 50 ms Option W: Wire break 	 1 x level control with adjustable time delay for A Optional with wire break monitoring 						
2R / 1CT2D / t	 1 x level/time (A) 2 x detection (B, C) t: Time delay in [ms], selectable 	 1 x level control with adjustable time delay for A Time delay for B and C selectable in order code The B C relay indicates in combination either sensor B for overflow protection or sensor C for dry run protection 						
2R / 2C / t	 2 x levels (A, B) t: Time delay in [ms], selectable 	 2 x level control Time delay for A and B selectable in order code 						
2R / 2CT / 0050	 2 x level/time (A, B) Min. time delay 50 ms 	 2 x level control with adjustable time delay for A and B 						

Application examples for devices with relay output | VNV-2, supply voltage: 24 V DC, 115 V AC or 230 V AC

Application examples for devices with active output | ZNV-2, supply voltage: 24 V DC

Model	Function	Application	
2A / 1CT(W) / 0050	 1 x level/time (A) Min. time delay 50 ms Option W: Wire break 	 1 x level control with adjustable time delay for A Optional with wire break monitoring 	
2A/1C1D/t x A/10-4 x A/1	 1 x level (A) 1 x detection (B) t: Time delay in [ms], selectable 	 1 x level control for A Time delay for B selectable in order code Sensor B for overflow protection 	

Order code for devices with relay output (housing width 45 mm)

VNV-2						
	Supply vol 24VDC 115VAC 230VAC	(Sup (Sup	ply voltage ply voltage ply voltage	115 V AC))	
		Outp	out			
		2R	(2 x relay)			
			Function s 1CT 1CTW 1CT2D* 2C* 2CT	(1 x leve (1 x leve (1 x leve (1 x leve (2 x leve (2 x leve	<pre>vel control with adjustable time delay) vel control with adjustable time delay, wire break monitoring) vel control with adjustable time delay, 2 x level detection) vel control with adjustable time delay) lelay (only selectable for devices with label*) (Delay 50 ms, standard) (Delay 150 ms) (Delay 750 ms) (Delay 1 s) (Delay 5 s) (Delay 10 s) Configuration 00 Fixed value ↓</pre>	
VNV-2	24VDC /	2R /	2C /	0750/	00	

Order code for devices with 24 V DC active output (housing width 45 mm)

VNV-2						
	Supply vo	oltage				
	24VDC	(Sup	(Supply voltage 24 V DC)			
		Outp	out			
		4A	(4 x active o	utput)		
			Function sco 1CT2D* 1CT2DW* 2CT 2CTW 4D*	(1 x leve (1 x leve monitori (2 x leve (2 x leve (4 x leve Time de 0050 0150 0750 1000 5000 9999	<pre>cl control with adjustable time delay) control with adjustable time delay, wire break monitoring) detection clay (only selectable for devices with label*) (Delay 50 ms, standard) (Delay 150 ms) (Delay 750 ms) (Delay 1 s) (Delay 5 s) (Delay 5 s) (Delay 10 s) Configuration 00 Fixed value </pre>	
VNV-2	24VDC /	4A /	4D /	0750/	00	

Order d	esignation f	for devi	ces with 24	4 V DC (ho	using width 22.5 mm)
ZNV-2					
	Supply vo	ltage			
	24VDC	(Supj	oly voltage	24 V DC)	
		Outp	ut		
		2A	(2 x activ	ve output)	
			Function 1CT 1CTW 1C1D*	(1 x leve (1 x leve (1 x leve	el control with adjustable time delay) el control with adjustable time delay, wire break monitoring) el control, 1 x level detection) elay (only selectable for devices with label*) (Delay 50 ms, standard) (Delay 150 ms) (Delay 750 ms) (Delay 1 s) (Delay 5 s) (Delay 10 s)
•	•	*	•	•	Configuration 00 Fixed value ↓
ZNV-2	24VDC /	2A/	1C1D /	0750/	00

50100 / 1.0 / 2018-06-05 / AR / EU

Phone +49 (0) 83 33 . 92 04 - 0 Fax +49 (0) 83 33 . 92 04 - 49 sales@anderson-negele.com Tech. Support: support@anderson-negele.com Phone +49 (0) 83 33 . 92 04 - 720